

be exclusively used in public toilet

**Best choice for induction soap
dispenser and Sterilizer**

**Auto soap dispenser and Sterilizer
Installation and operation instructions**

We declare that,
This product complies with the EWG
regulations and related standards
Low voltage regulation 73/23/EWG –
regulation 89/336/EWG

Preface

This operating instruction can help you understand and use the machine comprehensively.

- Please read the instructions carefully before use. There are important instructions about use, safety, maintenance in the instructions.
- This instructions can help you familiar with and understand your machine and its various functions.
- Please use it correctly according to the instructions and requirements of the manual, so as to maintain a long service life.
- Please pay great attention to safety tips to avoid accidents and damage to your machine.
- Please keep the instructions, which will be helpful if necessary.

This product conforms to the technical order and safety specifications of related electrical appliances. The manufacturer shall not be responsible for the damage caused by improper use or incorrect operation.



Auto soap dispenser and Sterilizer

Technical Parameters

Voltage	DC 6V 4 piece of 1.5V Type 2# C LR14
Battery Life Estimated	10,000 cycles or 1 year
Weight (without packaging)	1.4kg
Product Size (mm)	120x112x280

Important tips: 1. Do not use rechargeable batteries, otherwise there will be operational failure.

2. This machine is equipped with DC seat, which can connect 6V transformer to work. When power off or the transformer is not connected with current, please pull out the plug of DC seat, otherwise even if there are batteries, it will not work.

Installation Instructions

- When installing the machine, there must be no obstructions within 30cm below the soap dispenser sensor switch.
- Open the outer case with the enclosed key.
- The soap dispenser can be hung on the reserved fixed hole or pasted on the clean and grease-free surface with a double-sided adhesive.
- If you use a double-sided adhesive, The outer case should be opened until it spend 10 hours.
- Open the outer case, open the battery cover, and put the battery in the positive and negative directions.
- Open the switch above the pump body, take out the whole kettle, unscrew the lid of the kettle, and inject the special liquid.
- After the special liquid is injected, and then cover the lid and dry the pot with a towel.

Auto soap dispenser and Sterilizer

technical guidance

- In the pot, although there is enough liquid, it cannot be squeezed out: the battery is exhausted or the red light emitting diode is flashing, change the battery.
Check the position of soap and disinfection pump
Put the soap and disinfection pump in the right place.
Check that the outer case is properly closed?
Close the outer case properly.
Is there any obstruction within 30 cm distance below the sensor switch?
- This machine often works automatically, Change the installation position of the machine or remove the obstruction.
- This machine often drips out liquids or cannot squeeze out liquids:
Please replace the pump body.

Warranty Card

(Please keep it safe)

PRODUCT MODEL SPECIFICATION		NUMBER	
PURCHASE DATE		FILE NUMBER	
CUSTOMER	NAME OF ORGANIZATION	PHONE NUMBER	
	ADDRESS		
DEALER	NAME	PHONE NUMBER	STAMP HERE
	ADDRESS		

Warranty provisions:

1. From the date of purchasing, you can enjoy the free warranty for one year.
2. If the user is in normal use, during the warranty period, the machine get out of order, please take this warranty card to the company's special maintenance point for free maintenance.
3. During the warranty period, after the following conditions, do not enjoy free repair service.
 - A. Failure to use the instructions as required to cause incorrect operation, malfunction and damage, and damage afford by self-repair.
 - B. Failure and damage caused by abnormal conditions such as force majeure and abnormal power
 - C. Cannot present this warranty card or the warranty card is incomplete, unclear, and has no sales official seal.

4. Repair record

	REPAIR DATE	PROBLEM	REPLACEMENT OF PARTS	REPAIRMAN	USER SIGNATURE
1					
2					
3					
4					

- Check whether the pump is in the correct position before closing the outer case .
- Cover the outer case and the machine can be used.

